Vacuum Cleaner
user manual

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Code No. DJ68-00585F (REV 0.0)

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

	Indicates that a danger of death or serious injury exists.
	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must NOT disassemble.
	Represents something you must NOT touch.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	Represents a ground is needed to prevent electric shock.
	It is recommended that this symbol be handled by service man.

safety information

IMPORTANT SAFEGUARDS

- Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
- **WARNING** : Do not use the vacuum cleaner when rug or floor is wet.
  Do not use to suck up water.
- Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
- Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain the best efficiency.
- Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
- Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
- Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- The use of an extension cord is not recommended.
- If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't carry the vacuum cleaner by holding the hose.
  Use the handle on the vacuum cleaner set.
- Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05

05 Assembling the Cleaner

OPERATING THE CLEANER 06

06 Power cord
06 On/Off Switch
06 Power control

MAINTAIN TOOLS AND FILTER 08

08 Using accessory
09 Maintain floor tools
09 Dust Full Indicator
10 Cyclonic filter
(Only cyclonic filter types)
11 Changing the dust bag
11 Cleaning inlet filter
11 Cleaning outlet filter

TROUBLE SHOOTING 12

assembling the cleaner

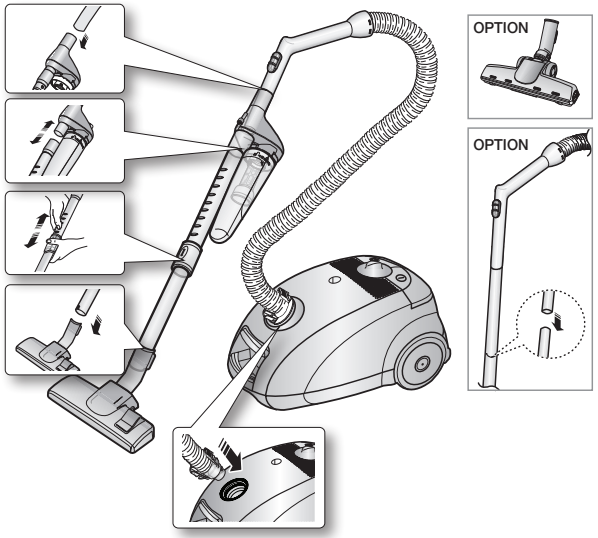

Features may vary according to model.

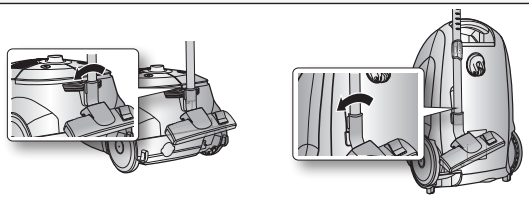

For storage, park the floor nozzle.

operating the cleaner

POWER CORD

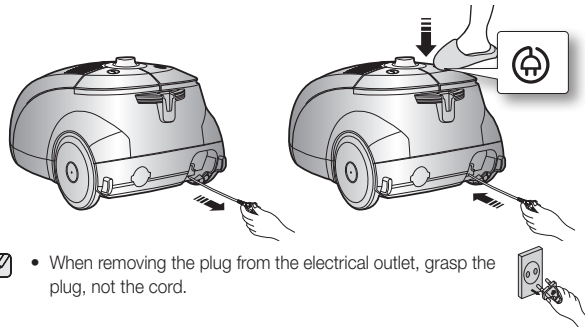

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

ON/OFF SWITCH

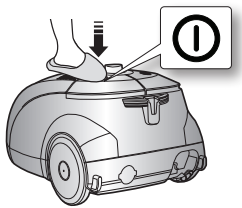

POWER CONTROL

- HOSE

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

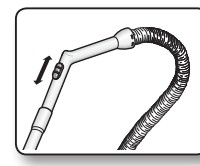

operating the cleaner

- BODY(VOLUME TYPE ONLY)

To control power level, just slide the power control bottom right and left.

MIN = For delicate fabrics, e.g.net curtains.
MAX = For hard floors and heavily soiled carpets.

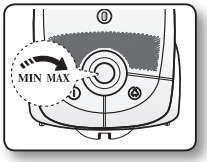

- USING THE BLOWER

Located on the left rear side of the cleaner.

1) Disconnect the hose from the body of the cleaner.
2) Connect the hose clamper to the blow hole.

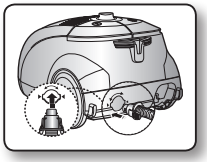

maintain tools and filter

USING ACCESSORY

Accessory

- Dusting brush for furniture. shelves, books, etc.

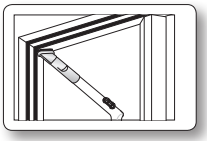

- Crevice tool for radiators, crevices, corners, between cushions.

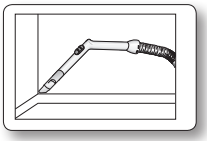

- For efficiency. clean Floor Nozzle with Crevice Tool.

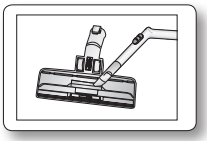

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

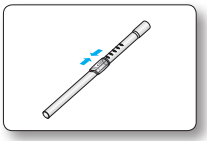

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

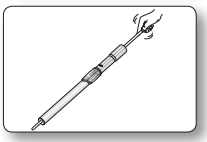

MAINTAIN FLOOR TOOLS

2-Step Brush

- Adjust the inlet lever according to the floor surface.

Carpet Cleaning

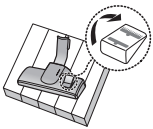

Floor Cleaning

- Remove waste matter completely if the inlet is blocked.



Pet Brush(Option)

For improved pick-up of pet hair and fibre on carpets.
Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.



DUST FULL INDICATOR

When the indicator color has changed Please replace the dust bag.

maintain tools and filter

CYCLONIC FILTER(ONLY CYCLONIC FILTER TYPES)

You can use a dust bag in your cleaner for a long time thanks to the Cyclonic Filter system and it maintain the maximum cleaning efficiency. The larger particle of dust filtered from Cyclonic Filter remain in Dust Barrel when suctioned air and dust revolves in the Cyclonic Filter. So the dust bag contains only smaller ones.
When the Dust Barrel is filled with dust up to the indicating line, it needs disposing and cleaning. Dust Barrel can be cleaned in water.

1. Turn the Dust Barrel to the left and pull it.
2. Disconnect the Cyclonic Filter from extension wand and handle.
3. Remove thread and hair tangled around the net.
4. After cleaning the Dust Barrel and Cyclonic Filter,connect the Cyclonic Filter with extension wand and handle(washed part should be dried in the shade throughly before assembling).
5. Push and turn the Dust Barrel to the right. Adjust indicating marks each other carved on Dust Barrel and Cyclonic Filter.

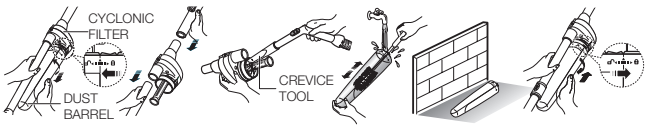

maintain tools and filter

CHANGING THE DUST BAG

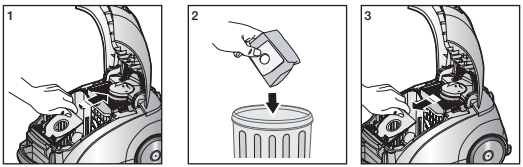

OPTIONAL

- For Cloth Bag
  After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

You can purchase dust bags in the shops where you bought this vacuum cleaner.
paper bag can be used as you prefer(Paper-bag:VP-77)

CLEANING INLET FILTER

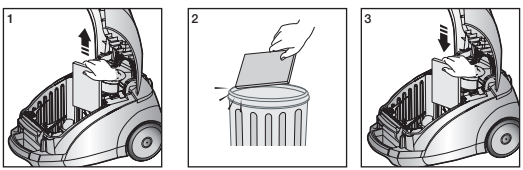

Don't throw away the filter.

CLEANING OUTLET FILTER

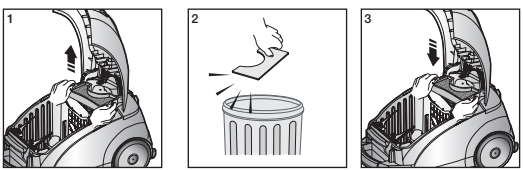

trouble shooting

PROBLEM	SOLUTION
Motor dows not start.	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner dows not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions.

استكشاف الأخطاء وإصلاحها

المشكلة	الحل
المحرك لا يبدأ التشغيل	• افحص قابس الكبل والمأخذ. • اترك المحرك حتى يبرد .
قوة الامتصاص تتناقص تدريجيًا.	• افحص وجود انسداد ثم قم بإزالته.
لا تتم إعادة لف السلك بالكامل	• قم بسحب السلك للخارج مقدار ٢-٣ متر ثم اضغط زر إعادة لف السلك.
المكنسة لا تقوم بالتقاط الأتربة	• افحص الخرطوم واستبدله إذا لزم الأمر.
انخفاض أو تناقص الامتصاص	• برجاء فحص الفلتر وتنظيفه إذا لزم الأمر كما هو موضح في التعليمات.

لأي أسئله لها علاقه بمنتجات سَامْسُوخْ يُرجى الإتصال بمركز خدمة عملاء شركة سَامْسُوخْ

Country	Customer Care Center ☎	Web Site
U.A.E	800-SAMSUNG(726-7864)	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com

صيانة الأدوات والفلتر

تغيير كيس الأتربة

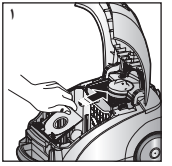

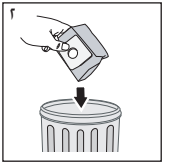

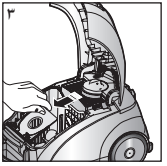

اختياري

• بالنسبة للكيس القماشي
.بعد الاستخدام، إذا كان الكيس القماشي مليئًا بالأتربة
قم بتنظيف الكيس القماشي ثم استخدمه مرة أخرى

يمكنك شراء أكياس الأتربة من المحلات التي تم شراء هذه المكنسة منها. يمكن استخدام الكيس الورقي حسب ما تفضل (الكيس الورقي: VP-77)

تنظيف فلتر الإدخال

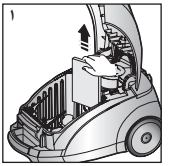

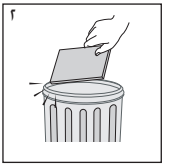

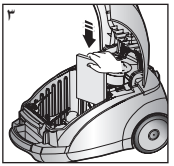

لا تتخلص من الفلتر

تنظيف فلتر الإخراج

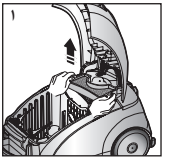

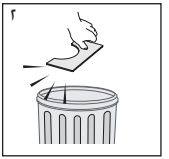

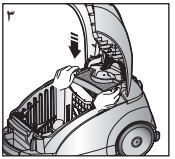

صيانة الأدوات والفلتر

مصفاة مخروطية(نوع المصفاة المخروطية فقط)

يمكنك استخدام كيس جمع غبار في المكنسة الكهربائية لمدة طويلة وذلك بفضل نظام المصفاة المخروطية وهذه تتسم بأقصى كفاءة للتنظيف.

الجزئيات الأكبر من الغبار الذي تمت تصفيتها من خلال المصفاة المخروطية

تبقى في وعاء الغبار عند امتصاص الهواء ويدور الغبار في المصفاة المخروطية.

فكيس جمع الغبار يحتوي على الغبار الأصفر فقط.

عند امتلاء وعاء الغبار بالغبار حتى يصل إلى المستوى المحدد. لا بد من تفريغ

الغبار والتنظيف. يمكنك تنظيف وعاء الغبار بالماء.

١. قم بتدوير وعاء الغبار لليسار واسحبه.

٢. انزع المصفاة المخروطية من عصا الاستطالة والمقبض.

٣. انزع الخيوط والشعر المتشابكة حول الشبكة.

٤. بعد تنظيف وعاء الغبار والمصفاة المخروطية، صل المصفاة المخروطية بعصا

الاستطالة والمقبض (يجب تجفيف الجزء المغسول في الظل تمامًا قبل التجميع).

٥. أدفع وعاء الغبار لليمين مع تدويره.

قم بضبط علامات التأشير المنقوش كل منها على وعاء الغبار والمصفاة المخروطية.

صيانة أدوات الأرضية

٢- فرشاة الدواسة

• قم بضبط زراع الإدخال حسب سطح الأرضية.

تنظيف السجاد

تنظيف الأرضية

• قم بإزالة النفايات بالكامل في حالة انسداد المدخل.



الفرشاة الأليفة (اختيارية)

للالتقاط شعر وألياف الحيوانات الأليفة بصورة محسنة من على السجاد. قد يؤدي الالتقاط المتكرر للشعر وفرو الحيوانات الأليفة إلى تعطيل التدوير بسبب تشابك الشعر حول الأسطوانة. في هذه الحالة، قم بتنظيف الأسطوانة بعناية



مؤشر الامتلاء بالأتربة

عند تغير لون المؤشر، برجاء استبدال كيس الأتربة.

صيانة الأدوات والفلتر

استخدام الملحقات

الملحقات

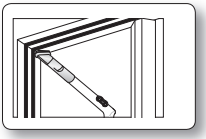

• فرشاة الأتربة للأثاث والأرفف والكتب وخلاله.

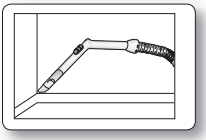

• أداة الشقوق لأجهزة الراديـاتير والشقوق والزوايا المناطق بين الوسائد.

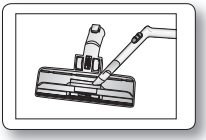

• لتحقيق الكفاءة، قم بتنظيف فوهة الأرض باستخدام أداة الشقوق

الماسورة

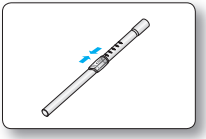

• قم بضبط طول الماسورة التليسكوبية من خلال تحريك زر التحكم في الطول الموجود في منتصف الماسورة التليسكوبية للخلف والأمام

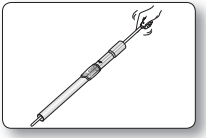

• لفحص وجود انسداد، قم بفصل الماسورة التليسكوبية وقم بضبطها على أقصر طول. سوف يسمح ذلك بسهولة إزالة النفايات التي تسد الأنبوبة.

تشغيل المكنسة

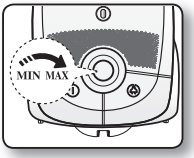

- الجسم

(النوع الذي يحتوي على زر لتغيير مستوى الطاقة فقط)

للتحكم في مستوى الطاقة، قم بتحريك زر التحكم في الطاقة جهة اليمين واليسار

MIN = للأقمشة الخفيفة، على سبيل المثال الستائر الشبكية.
MAX = للأرضيات الصعبة والسجاد شديدة الاتساخ.

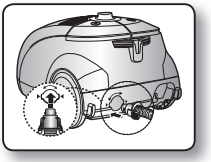

-استخدام المنفاخ

يوجد في الجزء الخلفي الأيسر من المكنسة

١) قم بفصل الخرطوم عن جسم المكنسة.
٢) قم بتوصيل ماسك الخرطوم بفتحة النفخ

تشغيل المكنسة

سلك الطاقة

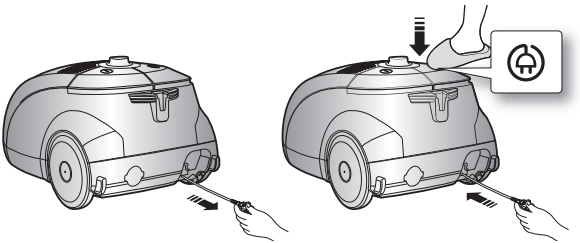

• عند نزع القابس من المأخذ الكهربائي، قم بالإمساك بالقابس وليس السلك

مفتاح التشغيل/إيقاف التشغيل

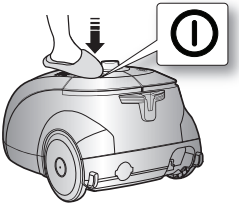

التحكم في الطاقة

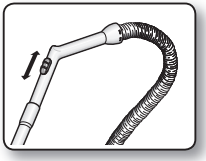

-الخرطوم

لتقليل الامتصاص للستائر المائلة والسجاد صغير الحجم والأقمشة الخفيفة الأخرى، اسحب جزء تهوية السدادة حتى يتم فتح الفتحة.

تجميع المكنسة

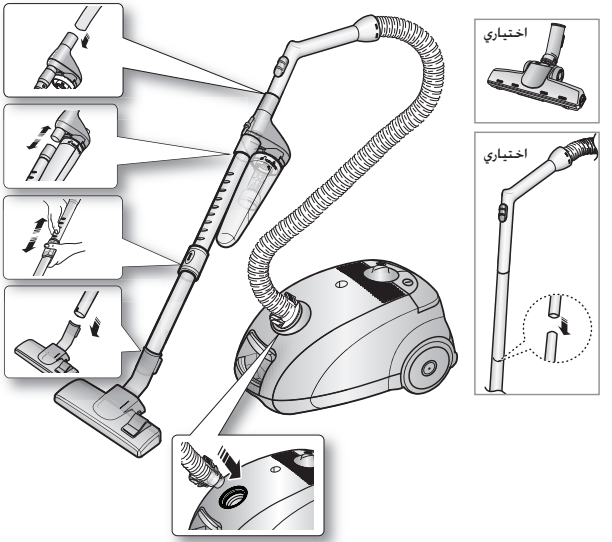

قد تختلف الإجراءات تبعًا للطراز. راجع الصفحة .

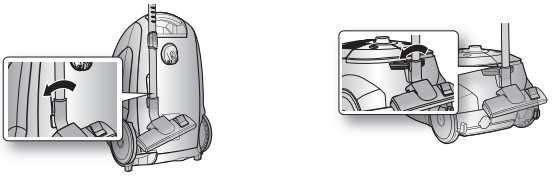

للتخزين، قم بتجميع فوهة الأرضية.

المحتويات

تجميع المكنسة

٠٥

٠٥ تجميع المكنسة

تشغيل المكنسة

٠٦

٠٦ سلك الطاقة
٠٦ مفتاح التشغيل/إيقاف التشغيل
٠٦ التحكم في الطاقة

صيانة الأدوات والفلتر

٠٨

٠٨ استخدام الملحقات
٥٩ صيانة أدوات الأرضية
٥٩ مؤشر الامتلاء بالأتربة
١٠ مصفاة مخروطية
(نوع الملصفاة المخروطية فقط)
١١ تغيير كيس الأتربة
١١ تنظيف فلتر الإدخال
١١ تنظيف فلتر الإخراج

صيانة الأدوات والفلتر

١٢

معلومات السلامة

احتياطات هامة

- اقرأ كافة التعليمات بعناية. وقبل التشغيل، تأكد من أن فرق الجهد لمصدر التيار الكهربائي بنفس القيمة المشار إليها على لوحة التقييم أسفل المكنسة.
- تحذير: لا تستخدم المكنسة عندما تكون السجادة أو الأرضية مبللة. لا تستخدم المكنسة لشفط المياه.
- يجب الإشراف عن قرب عن استخدام الجهاز بواسطة الأطفال أو بالقرب منهم.

لا تسمح باستخدام المكنسة كلعبة. لا تسمح بتشغيل المكنسة بدون رقابة في أي وقت. لا تستخدم المكنسة إلا في الغرض المقصود منها الموضح في هذه التعليمات.

- لا تستخدم المكنسة بدون كيس الأتربة. قم بتغيير كيس الأتربة قبل امتلائه للحفاظ على أفضل كفاءة.
- لا تستخدم المكنسة في التقاط أعواد الثقاب أو الرماد الحي أو أعقاب السجائر. احرص على إبعاد المكنسة عن الأفران أو مصادر التسخين الأخرى. يمكن أن تؤدي الحرارة إلى تشويه أو تغيير لون الأجزاء البلاستيكية للوحدة
- تجنب التقاط الأجسام الصلبة أو الحادة باستخدام المكنسة لأنها قد تؤدي إلى تلف أجزاء المكنسة. تجنب الوقوف على الخرطوم. تجنب وضع أوزان على الخرطوم. لا تقم بسد منفذ الشفط أو منفذ العادم.
- احرص على إيقاف تشغيل المكنسة من المفتاح الموجود على جسم المكنسة قبل فصل المكنسة عن المأخذ الكهربائي. قم بفصل القابس عن المأخذ الكهربائي قبل تغيير كيس الأتربة أو حاوية الأتربة. لتجنب التلف، برجاء إزالة القابس من خلال الإمساك بالقابس نفسه وليس من خلال سحب السلك.
- هذا الجهاز غير معد للاستخدام من جانب الأطفال الصغار أو الأشخاص المعاقين بدون إشراف ما لم تتم مراقبتهم بصورة كافية بواسطة شخص مسئول لضمان قدرتهم على استخدام الجهاز بأمان.
.يجب الإشراف على الأطفال الصغار للتأكد من أنهم لا يلعبون بالجهاز
- يجب نزع القابس من المأخذ قبل تنظيف أو صيانة الجهاز.
- لا يوصى باستخدام سلك تطويل.
- إذا لم يتم تشغيل المكنسة بشكل صحيح، قم بإيقاف تشغيل الطاقة ثم استشر وكيل خدمة مخول.
- في حالة حدوث تلف في كبل التزويد بالطاقة، يجب أن يتم استبداله بواسطة المصنع، أو وكيل الخدمة أو شخص مؤهل لهذا العمل لتجنب المخاطر.
- تجنب حمل المكنسة من خلال الإمساك بالخرطوم. استخدم المقبض الموجود على وحدة المكنسة.
- قم بفصل التيار عن المكنسة في حالة عدم استخدامها. قم بإيقاف تشغيل الطاقة قبل نزع القابس.

معلومات السلامة

معلومات السلامة

- قبل تشغيل الجهاز. برجاء قراءة هذا الدليل بالكامل والاحتفاظ به كمرجع لك
- نظرًا لأن تعليمات التشغيل التالية تغطي مجموعة متنوعة من الطرازات، فقد تكون خصائص المكنسة الخاصة بك مختلفة نوعًا ما عن تلك الموضحة في هذا الدليل

رموز التنبيه/التحذير المستخدمة

	يشير إلى وجود خطر يسبب الوفاة أو إصابة خطيرة.
	يشير إلى خطر يسبب إصابة شخصية أو تلف في الممتلكات.

الرموز الأخرى المستخدمة

	يمثل شيء يجب عدم القيام به.
	يمثل شيء يجب عدم فكه.
	يمثل شيء يجب عدم لمسه.
	يمثل شيء يجب اتباعه.
	يشير إلى أنه يجب فصل سلك الطاقة عن المأخذ.
	يمثل طرف أرضي مطلوب لتجنب الصدمة الكهربائية.
	يوصى بأن يتم التعامل مع هذا الرمز بواسطة فني الصيانة.

المكنسة
دليل المستخدم

* قبل استخدام هذه الوحدة برجاء قراءة التعليمات بعناية
* للاستخدام الداخلي فقط

Arabic

تخيل الإمكانات

شكرًا على شراء منتج Samsung للحصول على .
خدمة كاملة، برجاء تسجيل المنتج لديك على الموقع
www.samsung.com/register

SAMSUNG

Code No. DJ68-00585F (REV 0.0)